

How to Connect

Midi communication to the Eternity conforms to the specification for TRS to Midi adapters issued by the Midi Association. So what does this mean for me? In order to communicate via Midi you will need either a 5 pin to 1/4" TRS adapter cable that is wired to the TRS specification, or if you wish to make your own patch cables, a link to the wiring diagram and the midi specification can be found [here](#). You can also use a midi box/ hub that converts 5 pin Midi to multiple TRS outputs, like the **Traffic Control** from JET or similar boxes from Strymon or Morningstar. You could also use a compatible Midi controller with TRS midi output's like the Futurist by Matthews Effects or various controllers by Morningstar.

Revision #4

Created Tue, Apr 11, 2023 12:12 AM by Junior Thomason

Updated Wed, Aug 16, 2023 3:23 PM by Junior Thomason