

Web Editor

Features & Overview | How to Use the MCX Web Editor

- [System Requirements](#)
- [URL and Setting Up an Account](#)
- [Connecting Your MCX](#)
- [Programming the MCX](#)


System Requirements

Our easy to use web editor is available for use on Mac, Windows, and Android devices

We use the Web Serial API protocol to connect, communicate, and send/store messages to the MCX. At the time of writing this manual, you must use the Google Chrome web browser (version 80 or above).


*There will be a one time setup you will need to do to avoid connection issues. You must follow this link to enable the **Experimental Web Platform features**:

<chrome://flags/#enable-experimental-web-platform-features> Once this is done, you will be able to connect to the MCX and start programming your pedal.

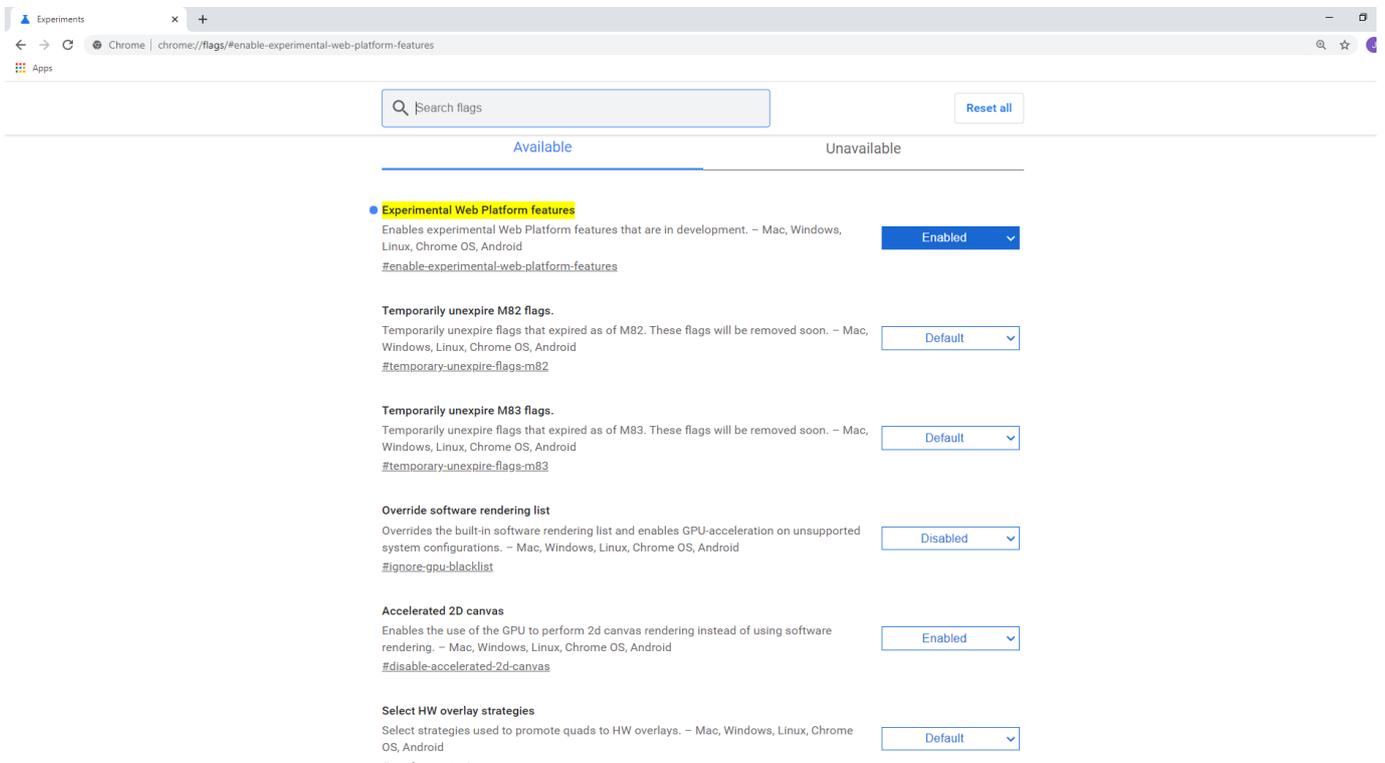

URL and Setting Up an Account

It's easy and free to use the JET MCX Web Editor to program your MCX. In order to use the web editor, you must sign up for a free account. Go to <https://app.jetpedals.com/> and click on "Create Account" in the top right navigation menu. From there, follow the steps to register for your account.

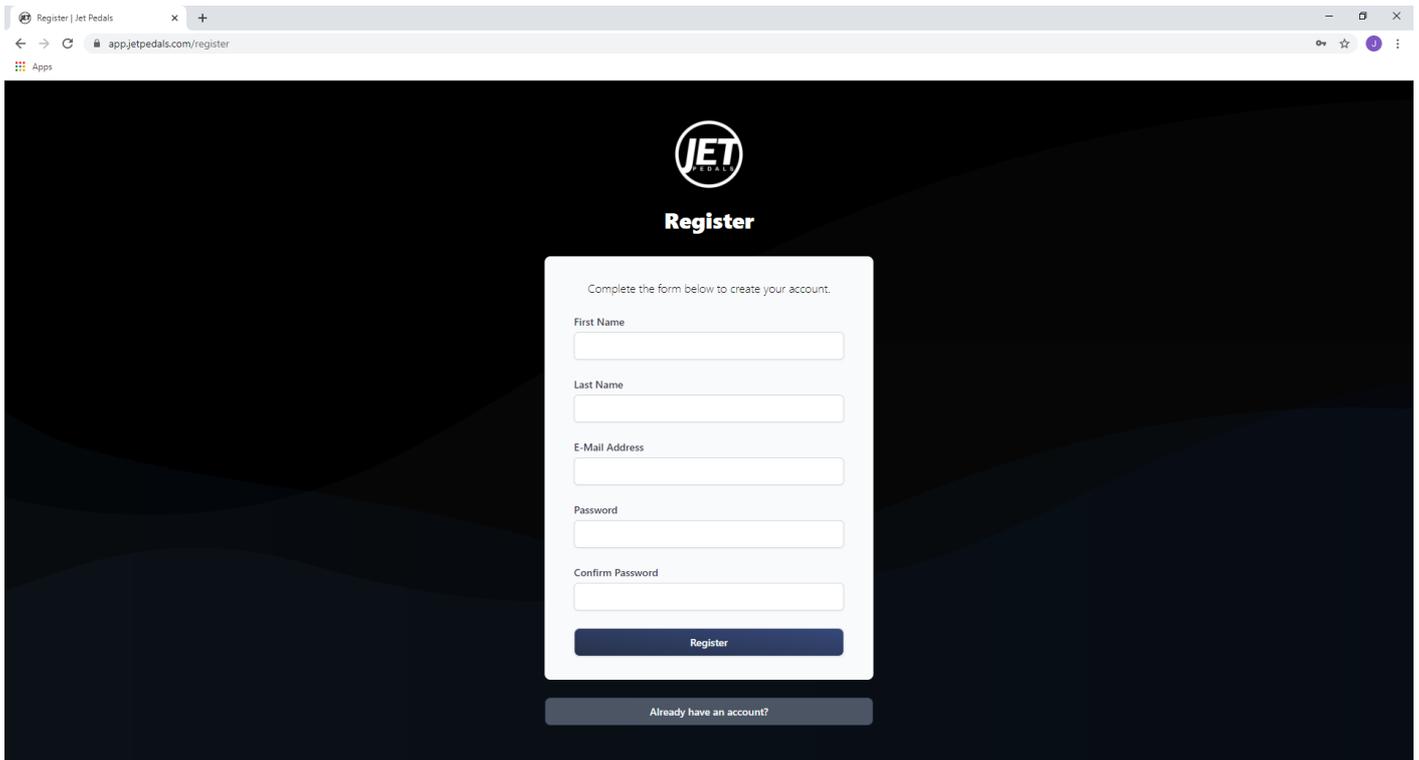

The image shows a web browser window displaying the registration page for JET Pedals. The browser's address bar shows the URL app.jetpedals.com/register. The page features the JET logo at the top center, followed by the word "Register". Below the logo, there is a white registration form with the following fields: "First Name", "Last Name", "E-Mail Address", "Password", and "Confirm Password". A blue "Register" button is located at the bottom of the form. Below the form, there is a link that says "Already have an account?".

Register | Jet Pedals

app.jetpedals.com/register

Apps

JET
REGISTER

Register

Complete the form below to create your account.

First Name

Last Name

E-Mail Address

Password

Confirm Password

Register


Already have an account?

Connecting Your MCX

The MCX connects to your Mac/PC with a USB 2.0 to Mini-B cable




Open the web app and plug the MCX into one of your Mac/PC's USB port. Click the "Connect Device" button on the top right of the web app and follow the pop up window prompting to connect to the MCX, once connected the "Connect Device" button will turn from blue to green showing the status of the connected pedal.

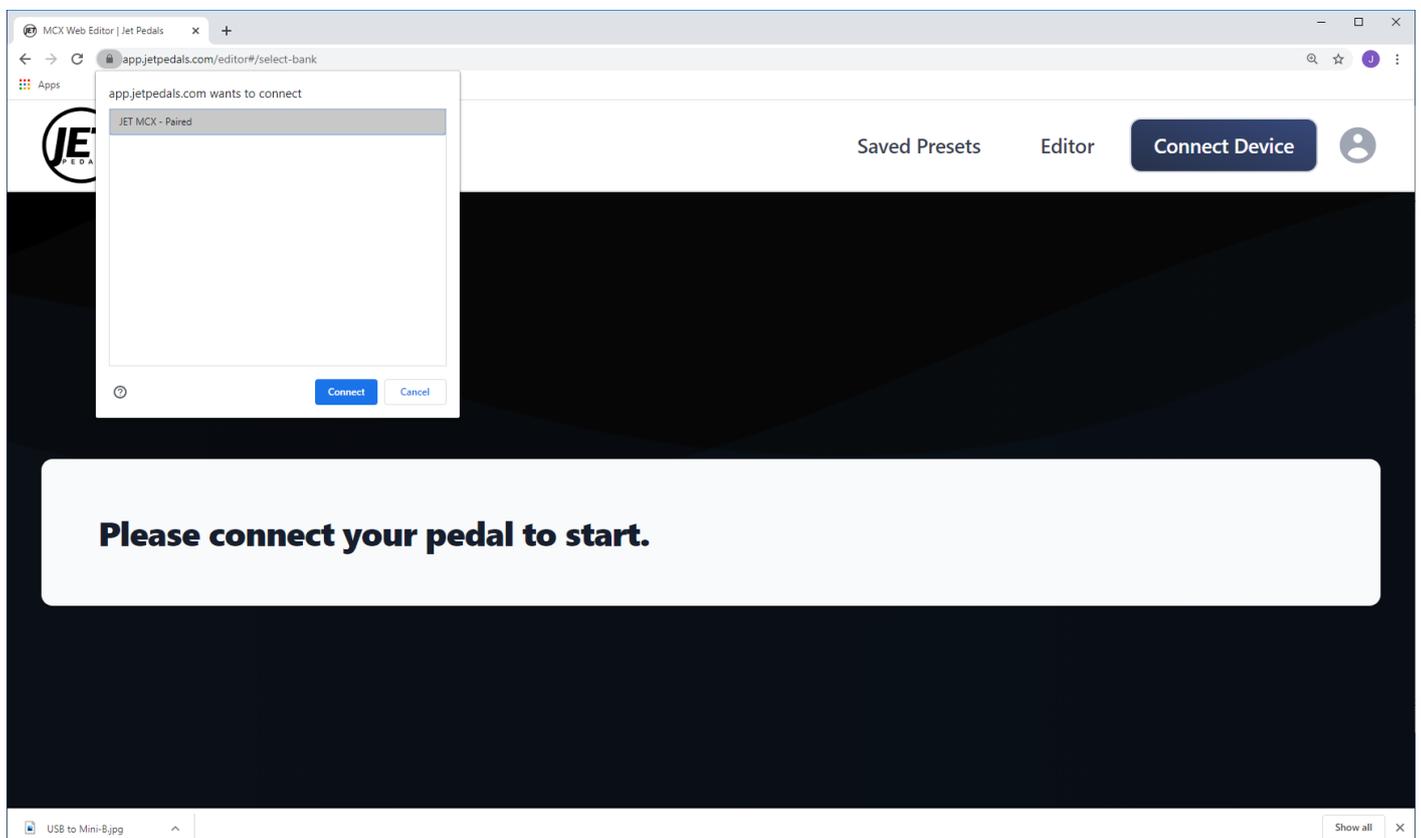

Programming the MCX

Step 1: Select the bank you would like to program.


The MCX has 8 completely independent banks in which to save MIDI commands. Each bank is defined by the multi-colored LED on the pedal and can store/send up to 160 MIDI messages per bank or a total of 1,280 MIDI messages for all 8 banks. Select the color you wish to start programming and then hit the “Select Color” button to proceed to Step 2.

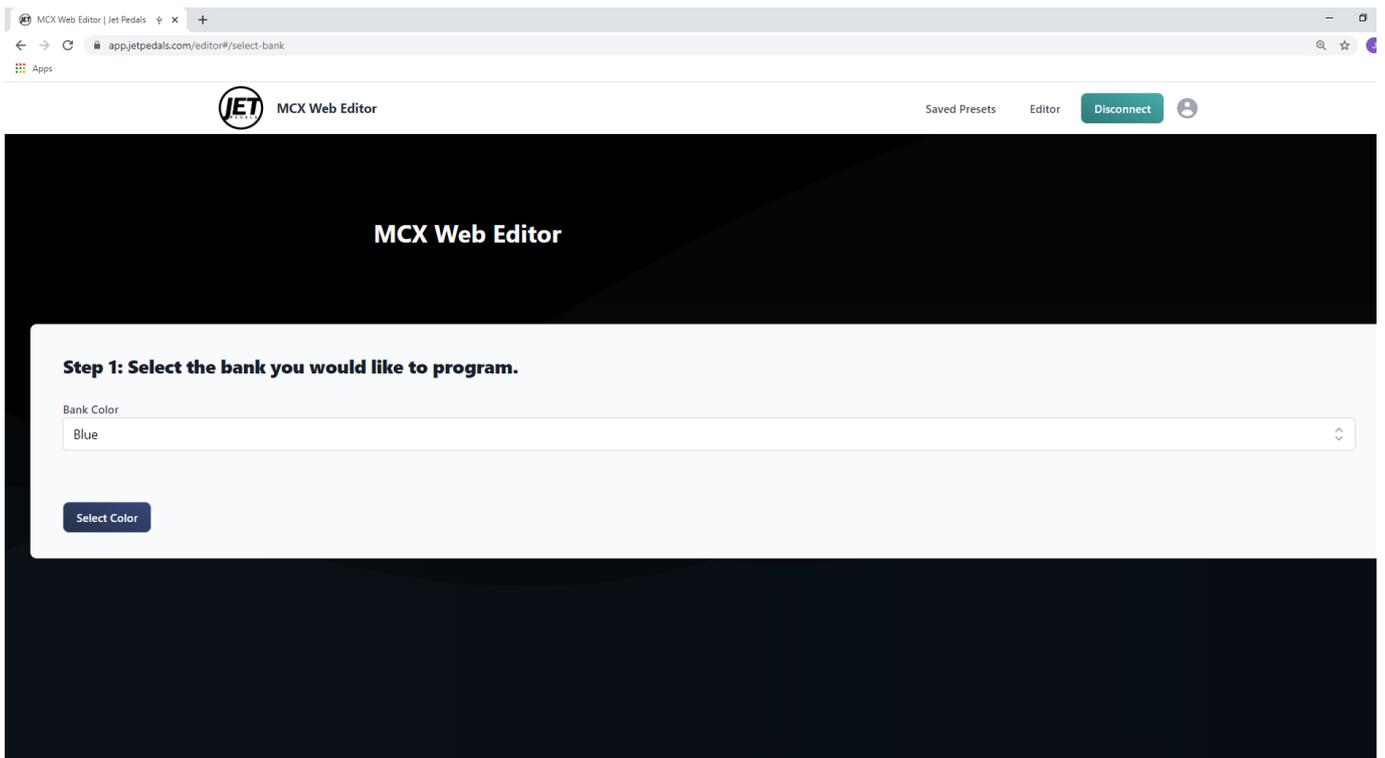

Step 2: Select your press action.

What is a press action? Each button, and 2-button press on the MCX have multiple press actions which can send a different set of MIDI commands per action. These are defined as “Short Press” and “Long Press.” MIDI messages assigned to a short press will execute once you press _and release_ the button, as long as you do not hold the button down for longer than half a second. MIDI messages assigned to the long press of a button will only execute on the release of the button, as long as you hold that button down for at least a half a second or longer.


The MCX has 10 unique press actions per bank, each press action can send up to 16 simultaneous MIDI messages. Select the press action you wish to program and hit the “Select Action” button to proceed to Step 3.

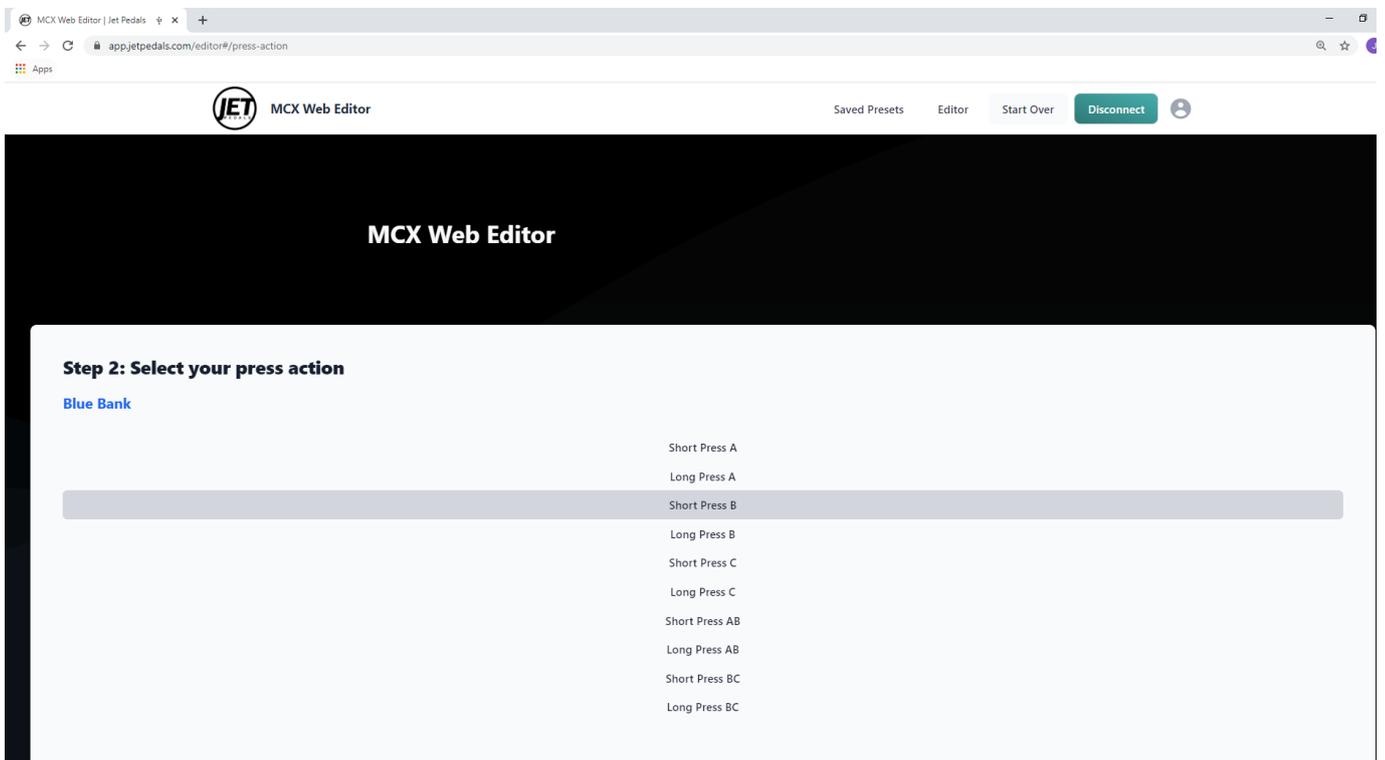

Step 3: Assign MIDI Messages.

This is where we get down to business! In each of the 16 messages you can choose from one of the 18 different message types that will get executed each time this button is pressed. Message types range from various MIDI messages like CC, PC, Toggle, MIDI Clock as well as messages that control the MCX such as increment/decrement bank number/color or jump to a specific bank number/color. See our [MIDI Type Glossary](#) for detailed information on each type.

Once you've filled out all of the messages needed for this press action, select the "Send All To Pedal" button. The LED on the MCX will flash green confirming the data has been saved. From here just repeat the process for each press action until you are satisfied with programming this bank.

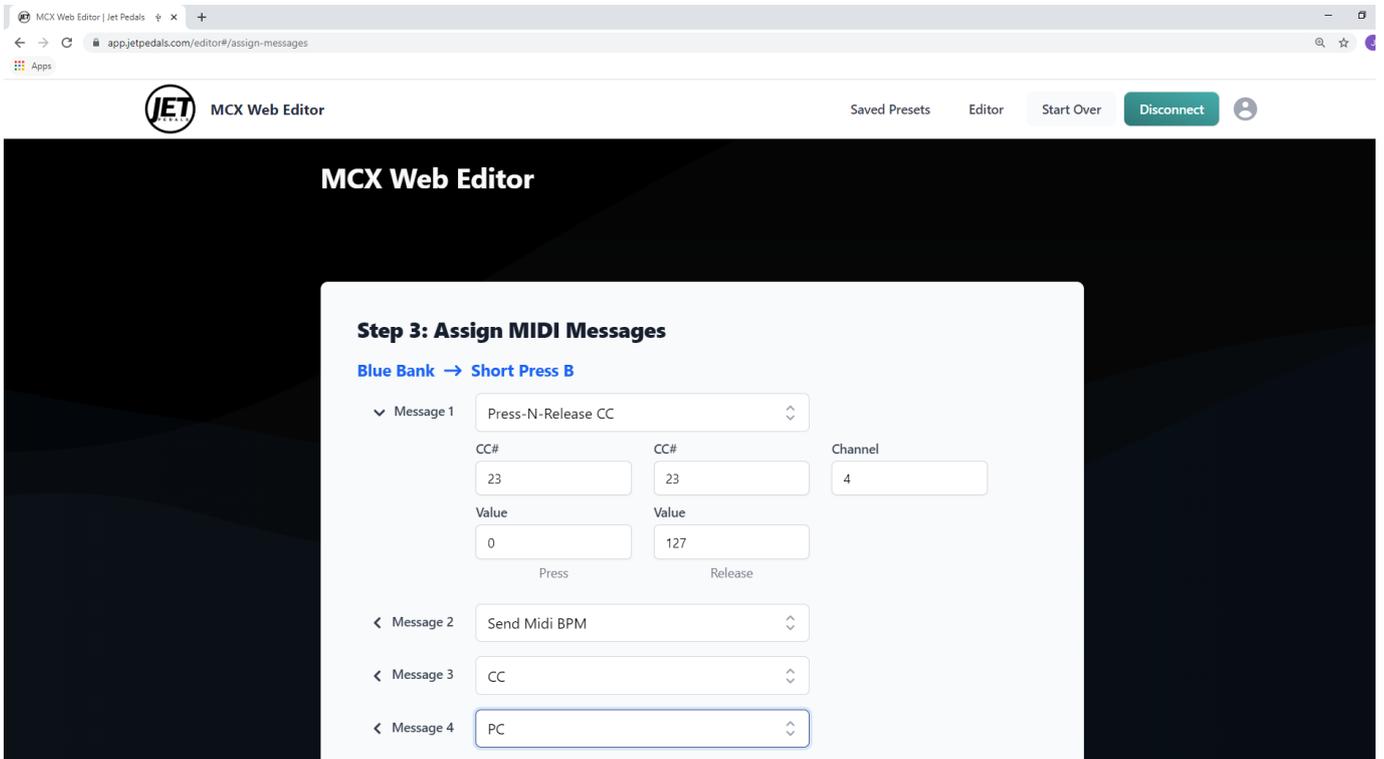

Step 4: Saving Presets or Programming Additional Press Actions

Once you've sent the messages to the pedal a pop up window will ask if you'd like to Make Changes, Save as Preset, or Start Over. Selecting Make Changes will allow you to edit the current Press Action. Selecting Save as Preset will allow you to save this group of message for later use. Simply give your preset a Name and Description, we suggest the Name to be either a song name and description could be Verse 1, Chorus, etc. or a pedal name like Time Line and description Dual Delay. Selecting Start Over will take you back to Step 2 to select a different Press Action within the same Bank.

