

Control Change Toggle

Used to toggle between two separate CC values

Enter the CC#'s, Values, and Channel for which to send your message.

When pressing the button associated with this Midi type, the CC# and Value above Max/On will be sent fist then the CC# and value above Min/Off will be sent on the second press, this process will repeat each time the button is pressed. Switching banks will reset the counter and Max/On will be sent with the first button press.

MCX Web Editor | Jet Pedals

app.jetpedals.com/editor#/assign-messages

MCX Web Editor

Saved Presets Editor Start Over Disconnect

MCX Web Editor

Step 3: Assign MIDI Messages

Red Bank → Short Press A

Message 1 CC Toggle

CC#	CC#	Channel
23	23	1
Value	Value	
0	127	
Min / Off	Max / On	

Message 2 Empty Message

Revision #2

Created Mon, Jul 27, 2020 1:15 AM by Junior Thomason

Updated Thu, Jul 30, 2020 1:51 AM by Junior Thomason