

# Control Change Toggle

Used to toggle between two separate CC values

Enter the CC#'s, Values, and Channel for which to send your message.

When pressing the button associated with this Midi type, the CC# and Value above Max/On will be sent fist then the CC# and value above Min/Off will be sent on the second press, this process will repeat each time the button is pressed. Switching banks will reset the counter and Max/On will be sent with the first button press.

MCX Web Editor

Step 3: Assign MIDI Messages

Red Bank → Short Press A

Message 1: CC Toggle

CC# 23 CC# 23 Channel 1

Value 0 (Min / Off) Value 127 (Max / On)

Message 2: Empty Message

Revision #2

Created Mon, Jul 27, 2020 1:15 AM by Junior Thomason

Updated Thu, Jul 30, 2020 1:51 AM by Junior Thomason