


# Decrement MCX Bank Number

Used to scroll down to the previous MCX bank / color.

There is no user input required for this message type. Simply select this type from the drop down window and press the Send All to Pedal button.

\*Once reaching the first bank / color on the MCX, the next press of the button assigned to the message type will cycle up to the top of the MCX and start the process all over again.

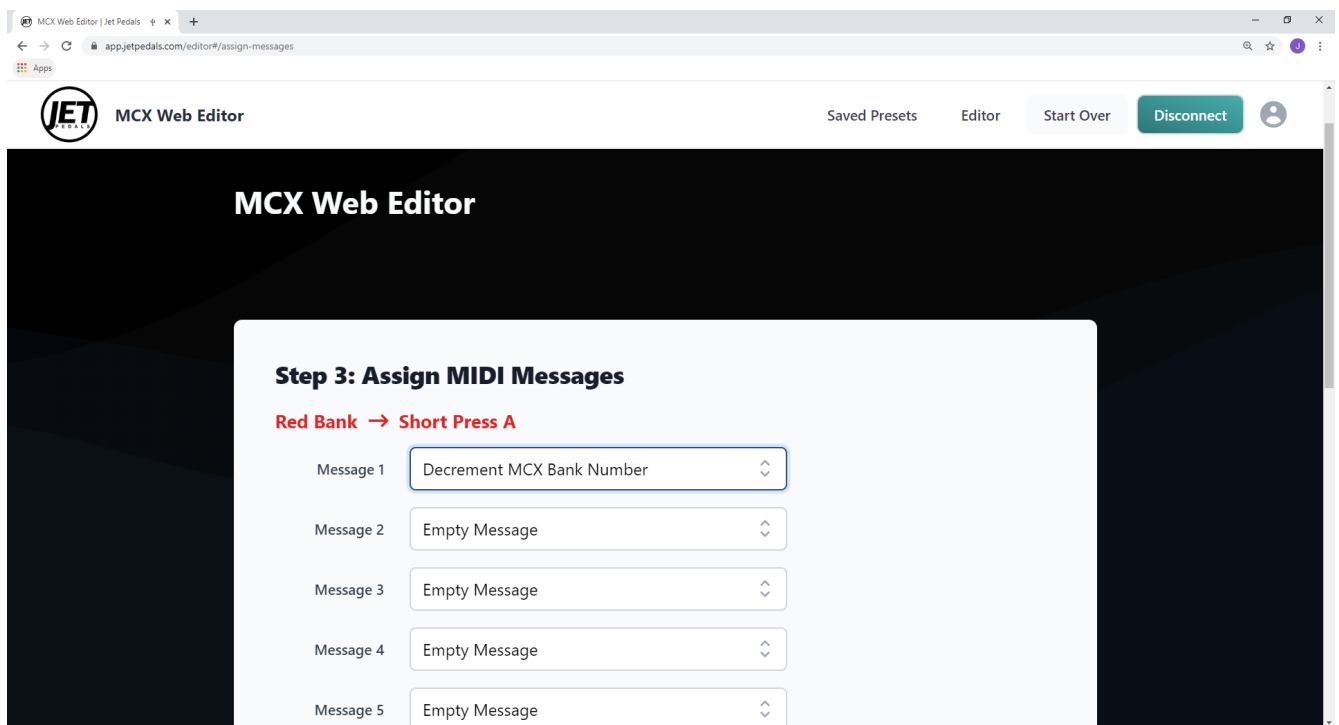

Revision #2

Created Mon, Jul 27, 2020 2:42 AM by Junior Thomason

Updated Thu, Jul 30, 2020 2:24 AM by Junior Thomason