


# Increment MCX Bank Number

Used to scroll up to the next MCX bank / color.

There is no user input required for this message type. Simply select this type from the drop down window and press the Send All to Pedal button.

\*Once reaching the last bank / color on the MCX, the next press of the button assigned to the message type will cycle down to the bottom of the MCX and start the process all over again.

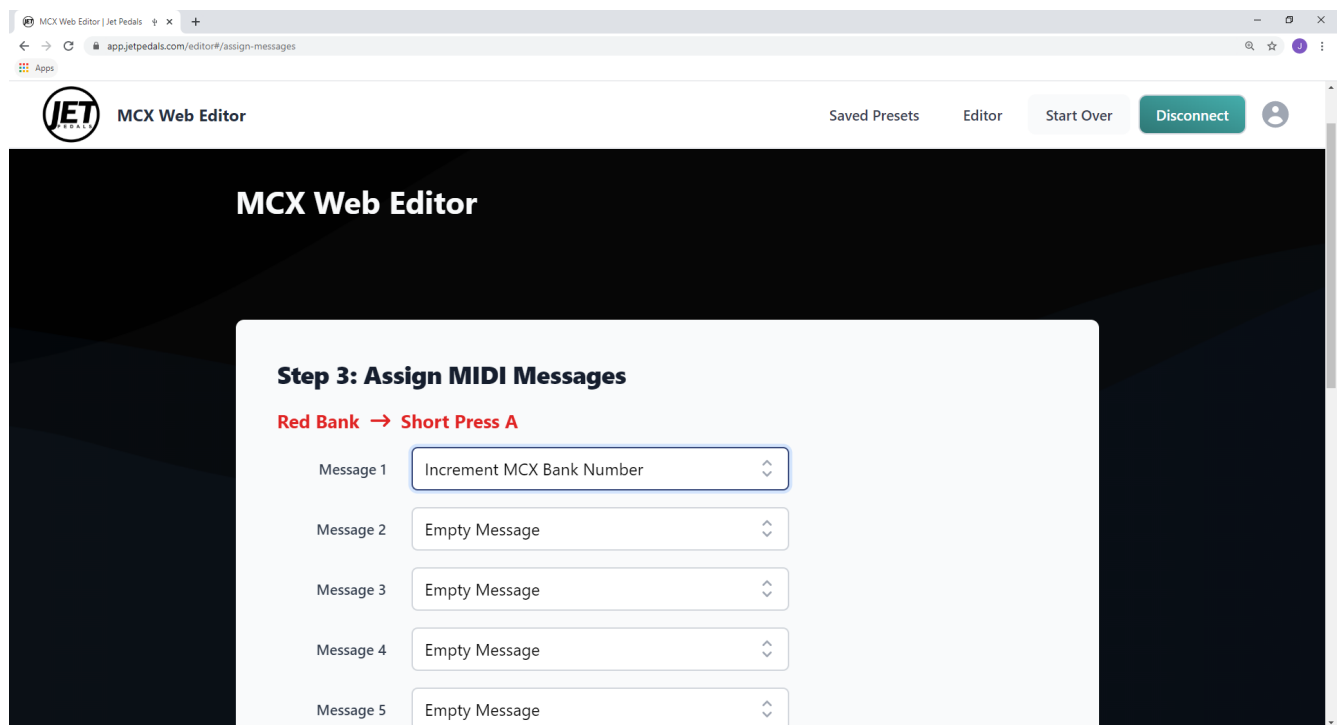

Revision #2

Created Mon, Jul 27, 2020 2:47 AM by Junior Thomason

Updated Thu, Jul 30, 2020 2:24 AM by Junior Thomason