


# Jump to MCX Bank

This message type is similar to the Decrement and Increment MCX Bank Number, however you can jump to any bank you wish, even if you've setup less than 8 banks to scroll thru in the global settings.

Simply select the bank number and press the Send All to Pedal button to assign this type to any press action. See the list of bank numbers and their associated LED color below:

1. Red
2. Green
3. Blue
4. Yellow
5. Purple (UV)
6. Cyan (Sky Blue)
7. White
8. Orange

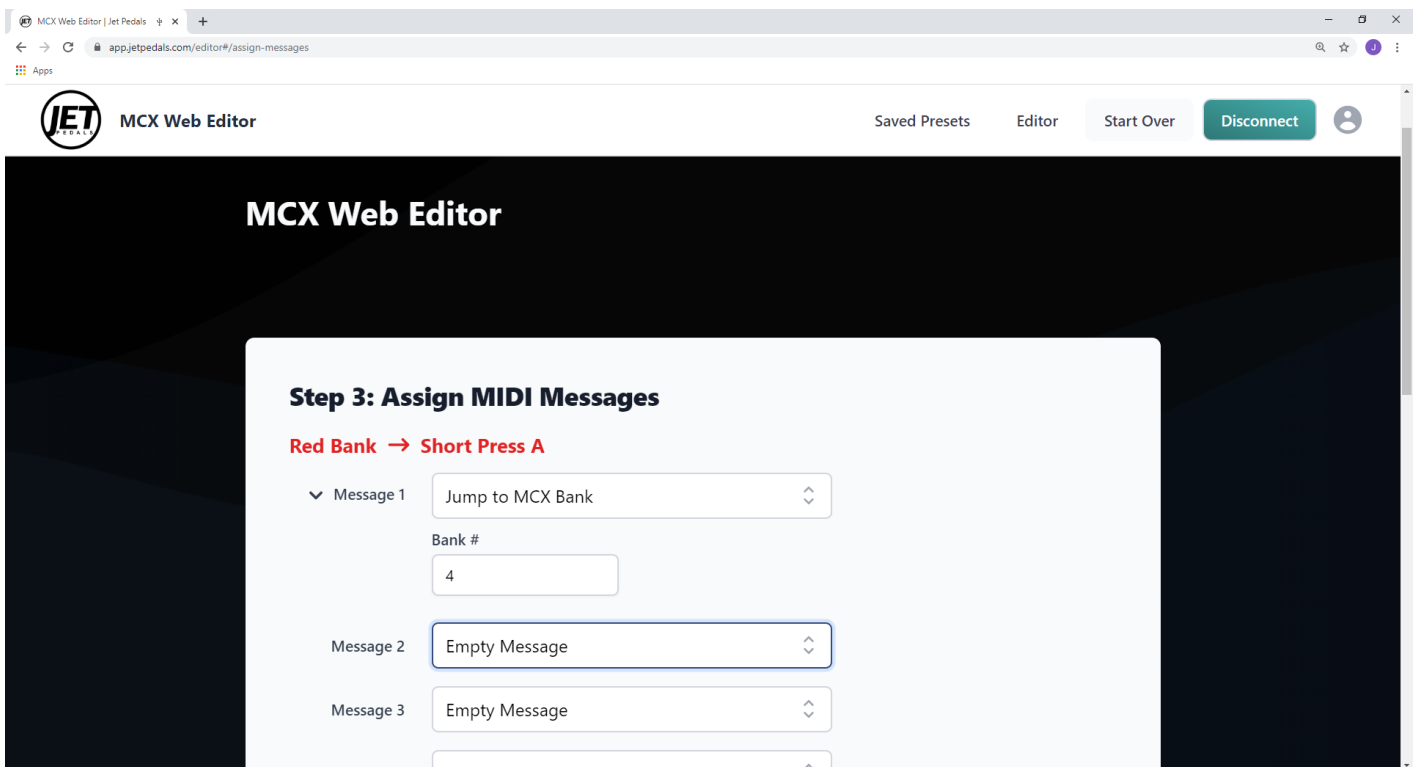

Revision #2

Created Mon, Jul 27, 2020 2:48 AM by Junior Thomason

Updated Thu, Jul 30, 2020 2:25 AM by Junior Thomason