


# MIDI Clock Tap Tempo

Used to send tap tempo out via the midi clock

There is no data to be entered for this Midi type, once assigned to a button it will now send tap tempo information via the MIDI clock.

\*Whenever a button is assigned to this Midi type, you must assign this to the Message #1 slot and no other messages will be sent. You will loose the ability to have anything assigned to the long press of the same button.

\*\* MIDI Clock operates on a much higher voltage than traditional guitar signals, when sending Midi Clock you may experience a slight ticking noise in your signal chain. To reduce this noise make sure your MCX is on an isolated power supply. If you want to stop the ticking noise all together, you should assign a button to stop the Midi clock after your pedals have sync'd, or enable the "auto stop clock" feature in the global settings.

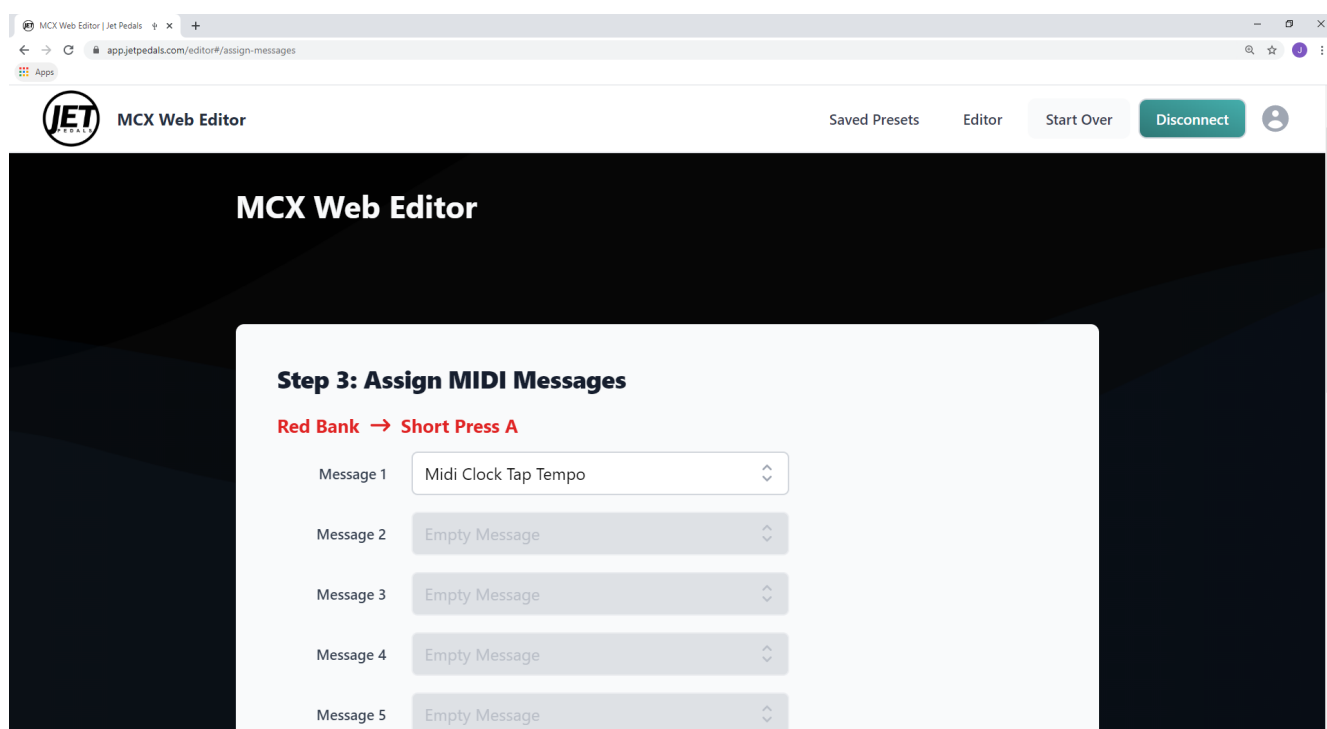

Revision #2

Created Mon, Jul 27, 2020 1:53 AM by Junior Thomason

Updated Thu, Jul 30, 2020 2:16 AM by Junior Thomason