


# Program Change Toggle

Used to toggle between two separate PC numbers

Enter the PC#'s and Channel for which to send your message.

When pressing the button associated with this Midi type, the PC# above Max/On will be sent first then the PC# above Min/Off will be sent on the second press, this process will repeat each time the button is pressed. Switching banks will reset the counter and the PC# above Max/On will be sent with the first button press.

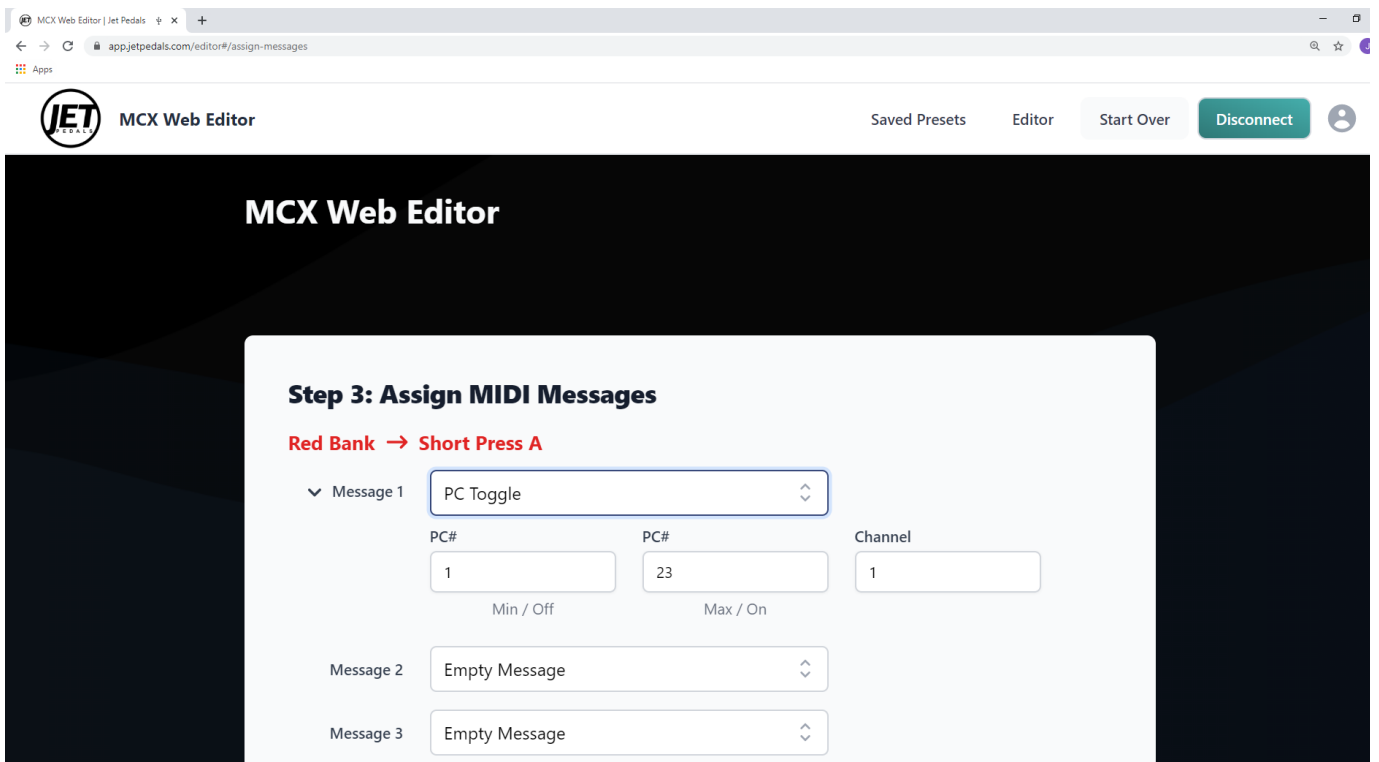

Revision #2

Created 27 July 2020 01:22:32 by Junior Thomason

Updated 30 July 2020 01:54:51 by Junior Thomason