


Program Change Toggle

Used to toggle between two separate PC numbers

Enter the PC#'s and Channel for which to send your message.

When pressing the button associated with this Midi type, the PC# above Max/On will be sent fist then the PC# above Min/Off will be sent on the second press, this process will repeat each time the button is pressed. Switching banks will reset the counter and the PC# above Max/On will be sent with the first button press.

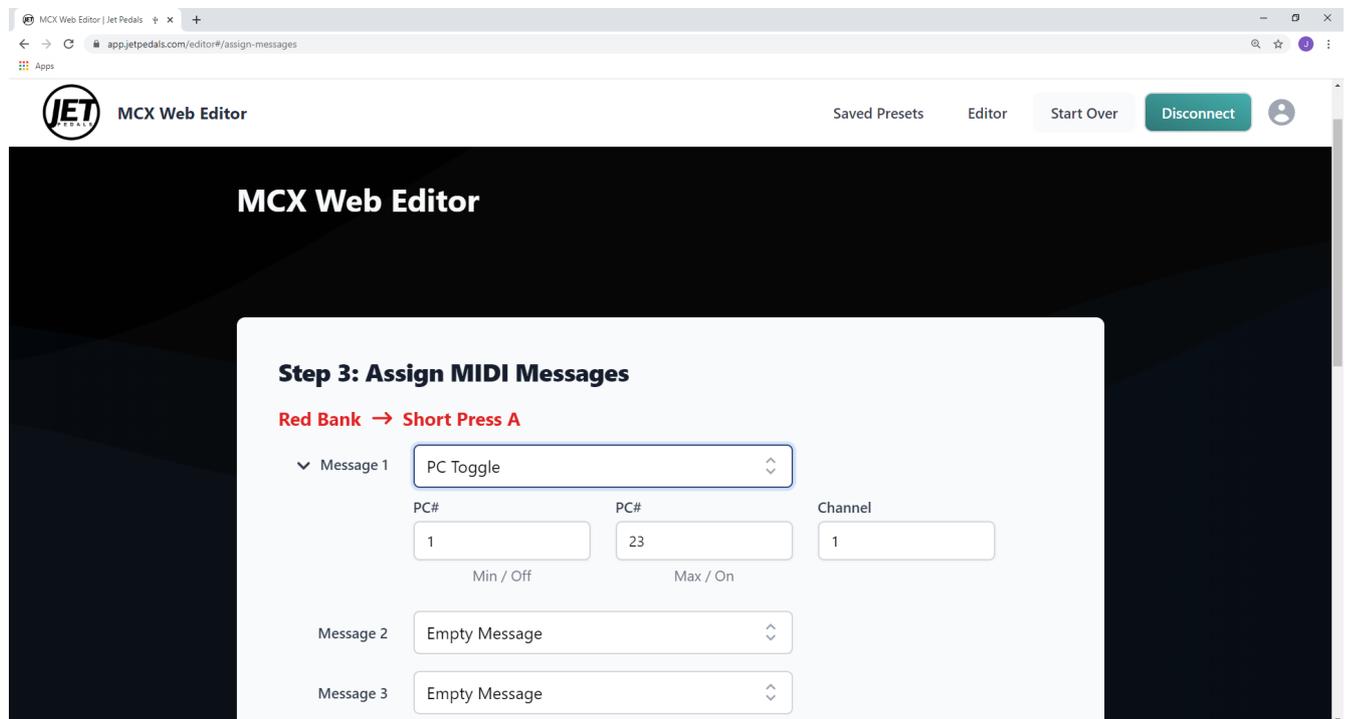

Revision #2

Created Mon, Jul 27, 2020 1:22 AM by Junior Thomason

Updated Thu, Jul 30, 2020 1:54 AM by Junior Thomason