

Strymon Bank Change

Used to bank up or down on a Strymon pedal

This is similar to CC Press-N-Release where one value is sent on the press and another on the release of the button however to bank up or down, Strymon requires two simultaneous CC#'s to be sent when pressed and released.

To bank down, enter CC#80 and Value 0 in the slots above Press. Also enter CC#82 and Value 127 in the slot above Release.

To bank up, enter CC#81 and Value 0 in the slot above Press. Also enter CC#82 and Value 127 in the slot above Release.

* When using this Midi type ***and you expect to hold the button down for longer than a half of a second.*** Both the short press and long press of the same button must be assigned to this Midi type and must also use the same values, if not, the desired result may not be as expected.

Revision #3

Created 27 July 2020 01:43:43 by Junior Thomason

Updated 30 July 2020 02:13:08 by Junior Thomason