

Strymon Bank Change

Used to bank up or down on a Strymon pedal

This is similar to CC Press-N-Release where one value is sent on the press and another on the release of the button however to bank up or down, Strymon requires two simultaneous CC#'s to be sent when pressed and released.

To bank down, enter CC#80 and Value 0 in the slots above Press. Also enter CC#82 and Value 127 in the slot above Release.

To bank up, enter CC#81 and Value 0 in the slot above Press. Also enter CC#82 and Value 127 in the slot above Release.

* When using this Midi type ***and you expect to hold the button down for longer than a half of a second.*** Both the short press and long press of the same button must be assigned to this Midi type and must also use the same values, if not, the desired result may not be as expected.

The screenshot shows a web browser window with the URL `app.jetpedals.com/editor#/assign-messages`. The page title is 'MCX Web Editor'. The interface includes a top navigation bar with 'Saved Presets', 'Editor', 'Start Over', and a 'Disconnect' button. The main content area is titled 'MCX Web Editor' and displays a configuration window for 'Step 3: Assign MIDI Messages'. The configuration is for 'Red Bank -> Short Press A'. It shows two messages: 'Message 1' and 'Message 2'. 'Message 1' is assigned to 'Strymon Bank Up/Dwn' and has two CC# values (80 and 82) and two Value values (0 and 127) for 'Press' and 'Release' respectively. 'Message 2' is assigned to 'Empty Message'.

Message	CC#	Value	Action
Message 1	80	0	Press
	82	127	Release
Message 2	Empty Message		

Revision #3

Created 27 July 2020 01:43:43 by Junior Thomason

Updated 30 July 2020 02:13:08 by Junior Thomason