

Strymon Bank Change

Used to bank up or down on a Strymon pedal

This is similar to CC Press-N-Release where one value is sent on the press and another on the release of the button however to bank up or down, Strymon requires two simultaneous CC#'s to be sent when pressed and released.

To bank down, enter CC#80 and Value 0 in the slots above Press. Also enter CC#82 and Value 127 in the slot above Release.

To bank up, enter CC#81 and Value 0 in the slot above Press. Also enter CC#82 and Value 127 in the slot above Release.

* When using this Midi type **and you expect to hold the button down for longer than a half of a second**. **Both the short press and long press of the same button must be assigned to this Midi type and must also use the same values**, if not, the desired result may not be as expected.

MCX Web Editor

Step 3: Assign MIDI Messages

Red Bank → Short Press A

Message 1: Strymon Bank Up/Dwn

CC#	CC#	Channel
80	82	1
Value	Value	
0	127	
Press	Release	

Message 2: Empty Message

Revision #3

Created Mon, Jul 27, 2020 1:43 AM by Junior Thomason

Updated Thu, Jul 30, 2020 2:13 AM by Junior Thomason