

# Always Active Tap Tempo

For detailed information about this feature and how it works, please visit the [Description](#) page.

To enable or disable this feature, turn power off and back on to the Micro. While the Micro is in the startup phase (blinking LED's) press down button C and continue to hold it down. Once you are in the global settings (the LED will either be off, solid red, green, or blue) pressing button A will toggle the LED between off, red, green, or blue.

If the LED is:

- Off - tap tempo is disabled
- Red - button A is "Always Active" tap tempo and will no longer toggle blocks or effect parameters
- Green- button B is "Always Active" tap tempo and will no longer toggle blocks or effect parameters
- Blue - button C is "Always Active" tap tempo and will no longer toggle blocks or effect parameters

Once you have reached your desired setting, simply release button C and the Micro will save your settings into permanent memory and exit the global settings.

---

Revision #3

Created Fri, Nov 6, 2020 8:55 PM by Junior Thomason

Updated Fri, Nov 6, 2020 9:09 PM by Junior Thomason