

# Blue Bank (Tap/Tuner Mode)

The blue bank is used to access tap tempo and the tuner. When in the blue bank, the follow buttons have been pre-programmed and cannot be user assignable.

- Short Press Button A - toggles the tuner on/off
- Short Press Button B - exits the Tap/Tuner Mode
- Short Press Button C - tap tempo

---

Revision #2

Created Fri, Nov 6, 2020 3:58 PM by Junior Thomason

Updated Fri, Nov 6, 2020 8:13 PM by Junior Thomason