

Connecting Power to the JET Stream

Using the provided DC power supply/adaptor, first connect the 2.5mm barrel connector to the JET Stream power amp. Secondly connect the grounded 120V plug into an AC outlet. Connecting the AC connector first may cause a slight spark when plugging in the 2.5mm barrel connector. This is due to the large input capacitance for the preamp section of the JET Stream.

Revision #1

Created 14 November 2025 17:49:05 by Junior Thomason

Updated 14 November 2025 17:49:59 by Junior Thomason