

I Am Getting Some Noise When Using the JET Stream

You could be getting a ground loop from the input signal and the power amp, try lifting the Ground Lift switch to eliminate the ground loop.

Revision #1

Created 14 November 2025 18:01:57 by Junior Thomason

Updated 14 November 2025 18:02:20 by Junior Thomason