

Control Change Messages

Receiving CC messages will control the individual controls, knobs, and switches of the Lamb

- CC #19 with any value of 1 thru 8 controls the Volume knob. 1 is the equivalent of having the knob turned completely counter-clockwise and 8 is like having the knob turned completely clockwise.
- CC #20 with any value of 1 thru 8 controls the Gain knob. 1 is the equivalent of having the knob turned completely counter-clockwise and 8 is like having the knob turned completely clockwise.
- CC #21 with any value of 1 thru 8 controls the Tone knob
- CC #22 with any value of 1 thru 8 controls the Mid Boost 1 knob
- CC #23
 - Any value between 0 & 63 turns the Bypass switch off
 - Any value between 64 & 127 turns the Bypass switch on
- CC #24
 - Any value between 0 & 63 turns the Preset switch off
 - Any value between 64 & 127 turns the Preset switch on
- CC #25 any value between 0 & 127 increments the Preset number
- CC #26 any value between 0 & 127 decrements the Preset number
- CC #27
 - Any value between 0 & 42 activates the Cyan circuit
 - Any value between 43 & 85 activates the White circuit
 - Any value between 86 & 127 activates the Yellow circuit
- CC #28 any value between 3 & 124 activates CC Snapshot mode
 - This takes a snapshot of your current settings and stores it permanent memory at the appropriate preset location. An example would be to send CC #28 Value 3, this stores a preset in the 3rd slot and can be recalled anytime by sending PC #3
- CC #29
 - Any value between 0 & 63 turns off the Lead Boost
 - Any value between 64 & 127 turns on the Lead Boost
(you can also exit the Lead Boost with the foot switches as well)

Revision #1

Created 10 February 2022 20:18:06 by Junior Thomason

Updated 10 February 2022 20:22:49 by Junior Thomason