

Program Change Messages

- PC #0 - Recalls the first preset (UV)
- PC #1 - Recalls the second preset (Red)
- PC #2 - Recalls the third preset (Green)
- PC #3 - 100 Recalls the preset created by CC Snapshot (Blue)
 - In this mode all of the LED's will be blue and the knobs will be active in case you need to make changes on the fly. Since every preset 3-100 will be the same color, it may be hard to remember what's been saved to each preset location. No worries, if you move the knobs away from their original position, the color of the LED's will change and when moved back to the saved preset location the LED's light up blue again. For the Gain and Tone knobs (that don't have an illuminated knob) the Preset and Bypass LED's will flash when moved away from the saved position and return solid when you navigate back to the saved preset location.

Revision #3

Created 10 February 2022 20:14:15 by Junior Thomason

Updated 6 October 2025 14:32:42 by Junior Thomason