

# Saving Presets

To enter "Preset Save Mode", make sure the pedal is engaged (Bypass switch on) and press and hold both the Bypass and Preset switch until the Bypass LED will begin to flash, confirming you are in "Preset Save Mode".

- A short press of the Bypass switch will cycle through the circuits
- A short press of the Preset switch will cycle through where to store the preset
- Once you've selected the right circuit and preset location, simply set the knobs to your desired positions and do a long press of the Preset switch. Once releasing the switch, the Preset LED will flash rapidly letting you know you've just saved that preset. Repeat as necessary to save your other presets
- To exit "Preset Save Mode", press and hold the Bypass switch for longer than 2 seconds and upon releasing the Bypass switch you will exit the "Preset Save Mode"

---

Revision #4

Created Tue, Feb 1, 2022 4:02 PM by Junior Thomason

Updated Thu, Jun 13, 2024 3:46 PM by Junior Thomason