

# Why Doesn't the Preset Work

Make sure the pedal is engaged (Bypass switch turned on) and then press the Preset switch. Presets are only accessible when the pedal is engaged and provides a quick way to jump back and forth between sounds in presets and in live mode.

---

Revision #1

Created Thu, Jun 13, 2024 3:46 PM by Junior Thomason

Updated Thu, Jun 13, 2024 3:49 PM by Junior Thomason