

Are there reverb trails when switching between presets?

When switching between modes (Live or Preset) or switching between presets, the pedal automatically enters a "graceful transition" state, the Preset LED will begin to flash letting you know that the Decay knob is gracefully returning to its new setting. This only applies when staying within the same algorithm, if you're switching between algorithm, you will not have reverb trails.

Revision #1

Created Fri, Jan 7, 2022 8:20 PM by Junior Thomason

Updated Fri, Jan 7, 2022 8:36 PM by Junior Thomason