

# Control Change Messages

Receiving CC messages will control the individual controls, knobs, and switches of the Revelation

- CC #20 with any value of 0 thru 127 controls the Mix knob. 0 is the equivalent of having the knob turned completely counter-clockwise (100% dry mix) and 127 is like having the knob turned completely clockwise (100% wet mix). Sending a value of 64 is the equivalent of having the knob straight up at noon.
- CC #21 with any value of 0 thru 127 controls the Decay knob
- CC #22 with any value of 0 thru 127 controls the Cntrl 1 knob
- CC #23
  - Any value between 0 & 63 turns the Bypass switch off
  - Any value between 64 & 127 turns the Bypass switch on
- CC #24
  - Any value between 0 & 63 turns the Preset switch off
  - Any value between 64 & 127 turns the Preset switch on
- CC #25 any value between 0 & 127 increments the Preset number
- CC #26 any value between 0 & 127 decrements the Preset number
- CC #27
  - Any value between 0 & 42 activates the Sky Blue algorithm
  - Any value between 43 & 85 activates the Ice algorithm
  - Any value between 86 & 127 activates the Yellow Sub algorithm
- CC #28 any value between 3 & 124 activates CC Snapshot mode
  - This takes a snapshot of your current settings and stores it permanent memory at the appropriate preset location. An example would be to send CC #28 Value 3, this stores a preset in the 3rd slot and can be recalled anytime by sending PC #3
- CC #29
  - Any value between 0 & 63 turns off Infinite Decay
  - Any value between 64 & 127 turns on Infinite Decay  
(you can also exit Infinite Bloom with the foot switches as well)

---

Revision #1

Created Fri, Jan 7, 2022 7:50 PM by Junior Thomason

Updated Fri, Jan 7, 2022 8:36 PM by Junior Thomason