

# Saving Presets

To enter "Preset Save Mode", press and hold both the Bypass and Preset switch for longer than 2 seconds and upon releasing both switches the Bypass LED will begin to flash confirming you are in "Preset Save Mode".

Once in "Preset Save Mode" a short press of the Preset switch will change the preset location (Mix LED will change colors) and a short press of the Bypass switch will change the algorithm (Decay LED will change colors). Call up your desired algorithm, preset location, and dial in the positions of each knob. Press and hold the Preset switch for at least 2 seconds to save that preset and stay in "Preset Save Mode". If you wish to save the current preset and exit "Preset Save Mode", hold down both the Preset switch and Bypass switch for at least 2 seconds. Upon releasing the Bypass LED will stop flashing confirming you've exited "Preset Save Mode".

To exit "Preset Save Mode" without saving over any previously stored presets, press and hold the Bypass switch for longer than 2 seconds and upon releasing the Bypass switch you will exit the "Preset Save Mode"

---

Revision #5

Created Fri, Jan 7, 2022 7:36 PM by Junior Thomason

Updated Sun, Apr 3, 2022 12:49 AM by Junior Thomason