

Amp Switch Off

Used to turn off/deactivate a switch found on any tube/solid state amplifier. Amp switches are typically channel switching or effect switching like reverb, tremolo, etc.

You can control up to 4 separate amp switches by plugging each amp switch into any of the 4 UniPorts. Before you can control the amp's switch, you must assign the appropriate UniPort to be used for each amp. See [here](#) for instruction on programming each UniPort.

Select the UniPort number to control the amp's switch that is plugged into the corresponding UniPort



Revision #1

Created Fri, Nov 15, 2024 4:52 PM by Junior Thomason

Updated Fri, Nov 15, 2024 4:56 PM by Junior Thomason