


# Amp Switch On

Used to turn on/activate a switch found on any tube/solid state amplifier. Amp switches are typically channel switching or effect switching like reverb, tremolo, etc.

You can control up to 4 separate amp switches by plugging each amp switch into any of the 4 UniPorts. Before you can control the amp's switch, you must assign the appropriate UniPort to be used for each amp. See [here](#) for instruction on programming each UniPort.

Select the UniPort number to control the amp's switch that is plugged into the corresponding UniPort

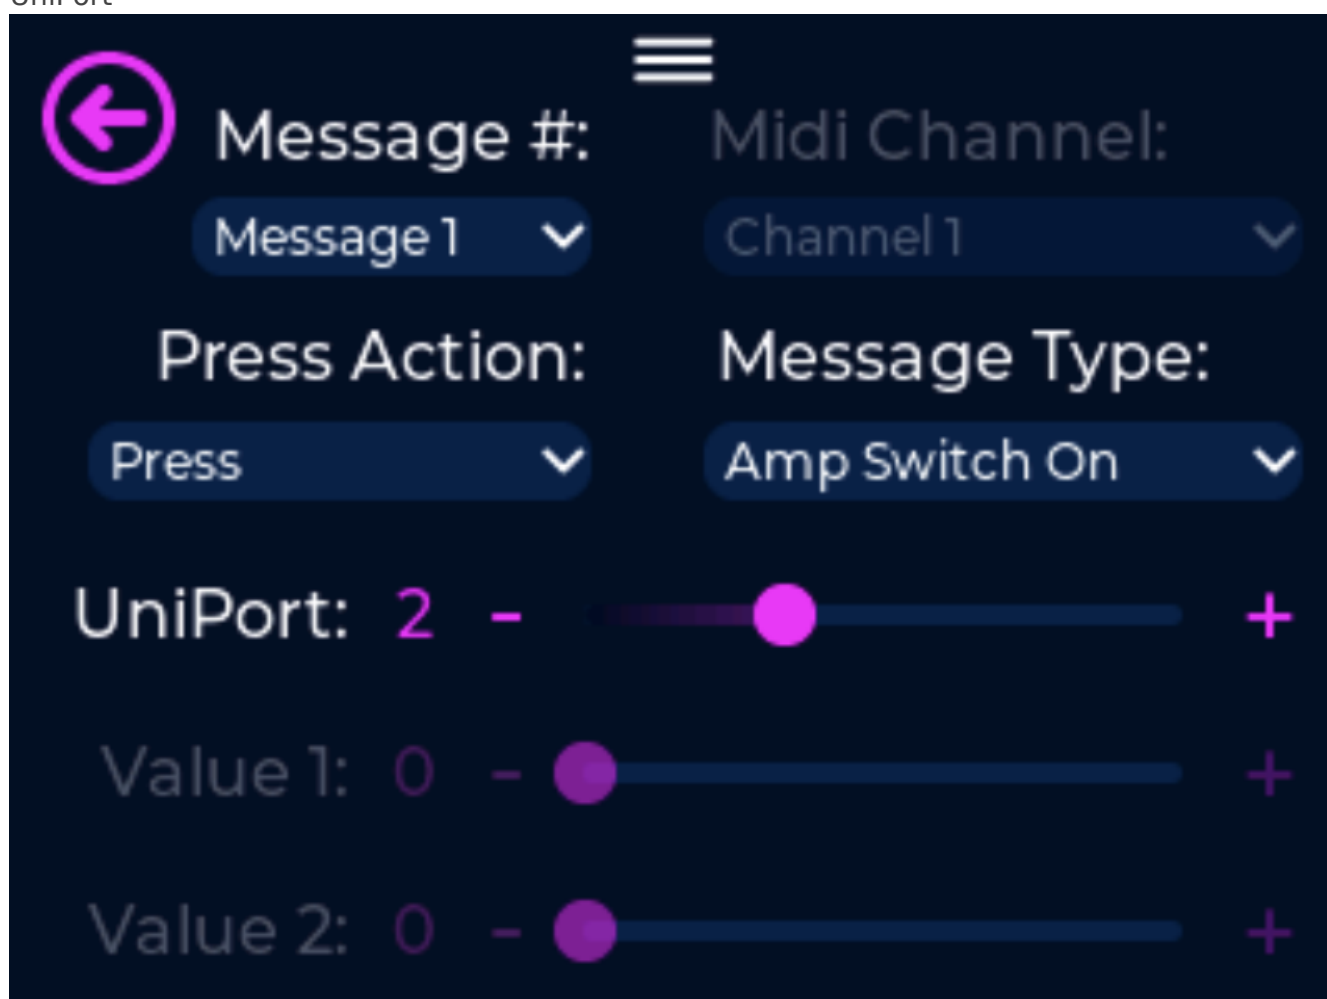

The screenshot shows a dark-themed MIDI controller interface. At the top left is a pink circular button with a left-pointing arrow. To its right is a hamburger menu icon. Below these are two columns of controls. The first column has 'Message #' with a dropdown menu showing 'Message 1', 'Press Action:' with a dropdown menu showing 'Press', and 'UniPort:' with a value of '2' and a slider. The second column has 'Midi Channel:' with a dropdown menu showing 'Channel 1', 'Message Type:' with a dropdown menu showing 'Amp Switch On', and 'Value 1:' and 'Value 2:' both with a value of '0' and sliders. All sliders have pink circular knobs and are flanked by minus and plus signs.

Message #:	Midi Channel:
Message 1	Channel 1

Press Action:	Message Type:
Press	Amp Switch On

UniPort:	Value 1:	Value 2:
2	0	0

Revision #1

Created Fri, Nov 15, 2024 4:35 PM by Junior Thomason

Updated Fri, Nov 15, 2024 4:56 PM by Junior Thomason