


Amp Switch On

Used to turn on/activate a switch found on any tube/solid state amplifier. Amp switches are typically channel switching or effect switching like reverb, tremolo, etc.

You can control up to 4 separate amp switches by plugging each amp switch into any of the 4 UniPorts. Before you can control the amp's switch, you must assign the appropriate UniPort to be used for each amp. See [here](#) for instruction on programming each UniPort.

Select the UniPort number to control the amp's switch that is plugged into the corresponding UniPort

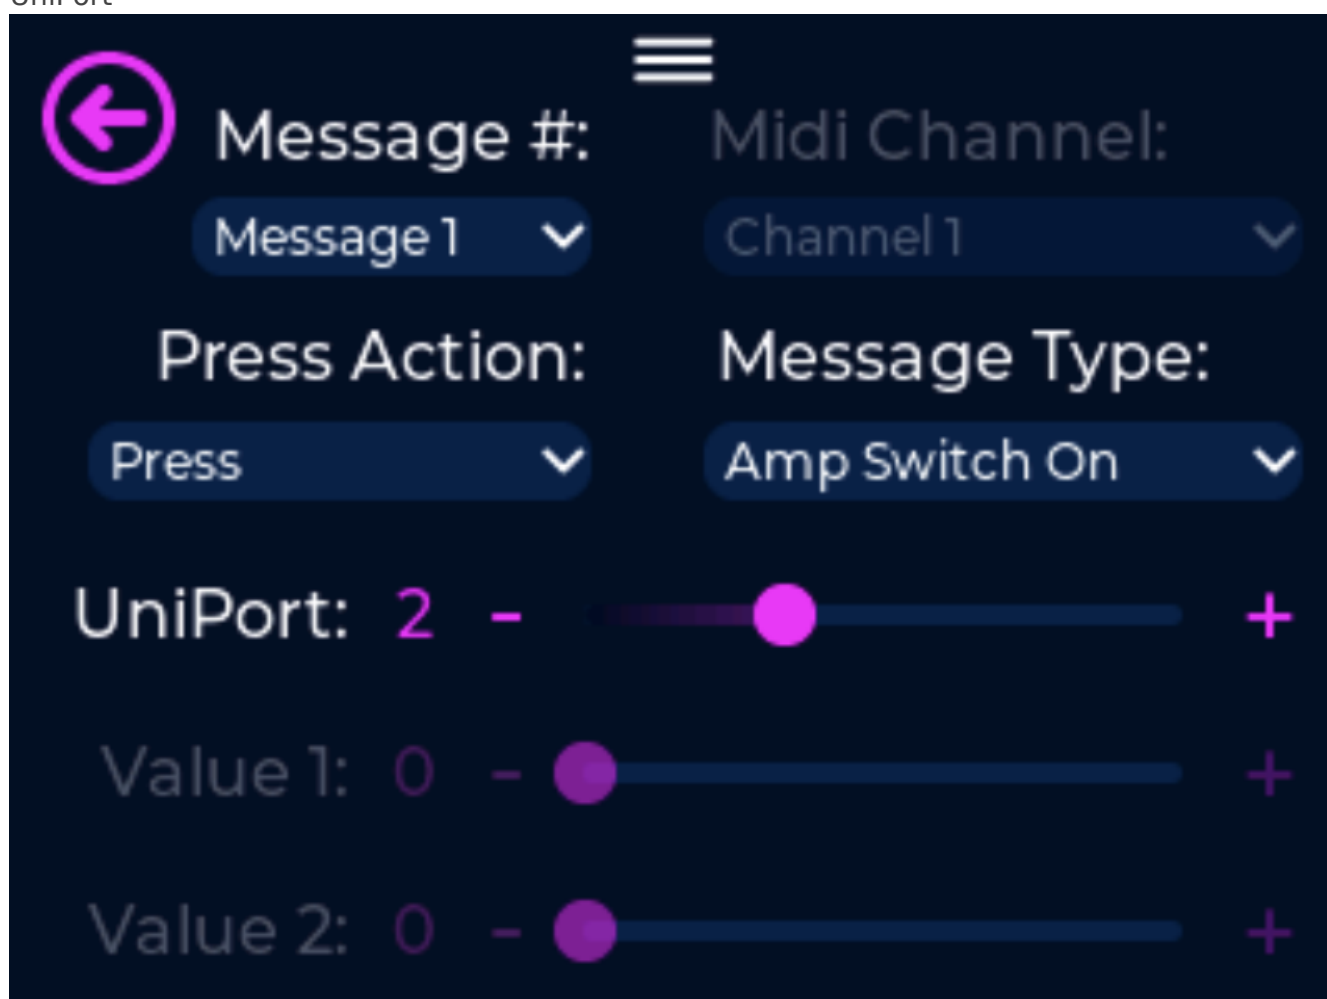

The image shows a screenshot of a MIDI controller interface with a dark blue background. At the top left is a pink circular button with a left-pointing arrow. To its right is a hamburger menu icon. Below these are two columns of settings. The first column has 'Message #' with a dropdown menu showing 'Message 1', 'Press Action:' with a dropdown menu showing 'Press', and 'UniPort:' with a value of '2' and a slider control. The second column has 'Midi Channel:' with a dropdown menu showing 'Channel 1', 'Message Type:' with a dropdown menu showing 'Amp Switch On', and 'Value 1:' and 'Value 2:' both with a value of '0' and slider controls. Each slider has a pink dot in the center and pink minus/plus signs at the ends.

| | |
|---------------|---------------|
| Message #: | Midi Channel: |
| Message 1 | Channel 1 |
| Press Action: | Message Type: |
| Press | Amp Switch On |
| UniPort: 2 | |
| Value 1: 0 | |
| Value 2: 0 | |

Revision #1

Created Fri, Nov 15, 2024 4:35 PM by Junior Thomason

Updated Fri, Nov 15, 2024 4:56 PM by Junior Thomason