

# CC Messages

Sending CC messages to the Unity6 will control various parameter of the pedal.

- **CC #6 - Tuner On/Off**
  - Value 0 thru 63 - Tuner Off
  - Value 64 thru 127 - Tuner On
- **CC #7 - Increment Bank Number**
  - Value 127 will increase the bank number by a value of 1
- **CC #8 - Decrement Bank Number**
  - Value 127 will decrease the bank number by a value of 1
- **CC #9 - Previous Bank**
  - Value 127 will jump to the previous bank
- **CC #11 - Toggle On/Off Loop 1**
  - Value 0 thru 63 - Loop 1 Off
  - Value 64 thru 127 - Loop 1 On
- **CC #12 - Toggle On/Off Loop 2**
  - Value 0 thru 63 - Loop 2 Off
  - Value 64 thru 127 - Loop 2 On
- **CC #13 - Toggle On/Off Loop 3**
  - Value 0 thru 63 - Loop 3 Off
  - Value 64 thru 127 - Loop 3 On
- **CC #14 - Toggle On/Off Loop 4**
  - Value 0 thru 63 - Loop 4 Off
  - Value 64 thru 127 - Loop 4 On
- **CC #15 - Toggle On/Off Loop 5**
  - Value 0 thru 63 - Loop 5 Off
  - Value 64 thru 127 - Loop 5 On
- **CC #16 - Toggle On/Off Loop 6**
  - Value 0 thru 63 - Loop 6 Off
  - Value 64 thru 127 - Loop 6 On

**\*\*\* CC #20 and CC #21 Available With Firmware v2.2.0 and Above \*\*\***

- **CC #20 - Set the BPM on the Unity6**

- Value 40 thru 100 - Sets the BPM

- \* Values below 40 will set the Unity6 to 40 BPMs  
and values above 100 will set the Unity6 to 100 BPMs

- **CC #21 - Set the BPM on the Unity6**

- Value 0 thru 127 - Sets the BPM + 100

- \* Example 1: Sending value 10 sets the BPM to 110

- Example 2: Sending value 127 sets the BPM to 227

---

Revision #6

Created Mon, Jun 10, 2024 6:32 PM by Junior Thomason

Updated Mon, May 5, 2025 5:08 PM by Junior Thomason