


# CC Toggle

Used to toggle between two separate CC values

Enter the Number, Values, and Channel for which to send your message.

When pressing the switch associated with this Midi type, the On Value will be sent first then the Off Value will be sent on the second press, this process will repeat each time the button is pressed. Switching banks will reset the counter and the On Value will be sent with the first button press.



The screenshot shows a dark-themed configuration interface for a 'CC Toggle' function. At the top left is a pink circular button with a left-pointing arrow. Below it are two dropdown menus: 'Message #' set to 'Message 1' and 'Midi Channel:' set to 'Channel 1'. Further down are 'Press Action:' set to 'Press' and 'Message Type:' set to 'CC Toggle'. The bottom section features three horizontal sliders with pink knobs. The first slider is labeled 'Number: 64' with minus and plus icons. The second is 'On Value: 127' with minus and plus icons. The third is 'Off Value: 0' with minus and plus icons. At the very bottom, text reads 'Hold BPM Dial for 3s to Clear Preset'.

Parameter	Value
Message #	Message 1
Midi Channel	Channel 1
Press Action	Press
Message Type	CC Toggle
Number	64
On Value	127
Off Value	0

Hold BPM Dial for 3s to Clear Preset

Revision #4

Created Mon, Jun 10, 2024 3:10 PM by Junior Thomason

Updated Mon, Jun 10, 2024 4:51 PM by Junior Thomason