

CC Toggle

Used to toggle between two separate CC values

Enter the Number, Values, and Channel for which to send your message.

When pressing the switch associated with this Midi type, the On Value will be sent first then the Off Value will be sent on the second press, this process will repeat each time the button is pressed. Switching banks will reset the counter and the On Value will be sent with the first button press.



The screenshot shows a dark-themed interface for configuring a MIDI preset. It features several settings:

- Message #:** A dropdown menu set to "Message 1".
- Midi Channel:** A dropdown menu set to "Channel 1".
- Press Action:** A dropdown menu set to "Press".
- Message Type:** A dropdown menu set to "CC Toggle".
- Number:** A slider set to 64.
- On Value:** A slider set to 127.
- Off Value:** A slider set to 0.

At the bottom, there is a text instruction: "Hold BPM Dial for 3s to Clear Preset".

Revision #4

Created 10 June 2024 15:10:34 by Junior Thomason

Updated 10 June 2024 16:51:44 by Junior Thomason