


# CC Toggle

Used to toggle between two separate CC values

Enter the Number, Values, and Channel for which to send your message.

When pressing the switch associated with this Midi type, the On Value will be sent first then the Off Value will be sent on the second press, this process will repeat each time the button is pressed. Switching banks will reset the counter and the On Value will be sent with the first button press.



The screenshot shows a dark-themed configuration interface for a MIDI CC Toggle. It features several dropdown menus and three horizontal sliders. A pink circular arrow icon is in the top left corner.

Parameter	Value
Message #:	Message 1
Midi Channel:	Channel 1
Press Action:	Press
Message Type:	CC Toggle
Number:	64
On Value:	127
Off Value:	0

Hold BPM Dial for 3s to Clear Preset

Revision #4

Created Mon, Jun 10, 2024 3:10 PM by Junior Thomason

Updated Mon, Jun 10, 2024 4:51 PM by Junior Thomason