


# CC Toggle

Used to toggle between two separate CC values

Enter the Number, Values, and Channel for which to send your message.

When pressing the switch associated with this Midi type, the On Value will be sent first then the Off Value will be sent on the second press, this process will repeat each time the button is pressed. Switching banks will reset the counter and the On Value will be sent with the first button press.



The image shows a digital interface for configuring a CC Toggle. It features a dark blue background with white and pink text and controls. At the top left is a pink circular button with a left-pointing arrow. Below it are two rows of dropdown menus: 'Message #' with 'Message 1' selected, 'Midi Channel:' with 'Channel 1' selected, 'Press Action:' with 'Press' selected, and 'Message Type:' with 'CC Toggle' selected. Below these are three horizontal sliders with pink knobs. The first slider is labeled 'Number: 64' with minus and plus icons. The second slider is labeled 'On Value: 127' with minus and plus icons. The third slider is labeled 'Off Value: 0' with minus and plus icons. At the bottom, a text instruction reads 'Hold BPM Dial for 3s to Clear Preset'.

← Message #: Message 1 ▼ Midi Channel: Channel 1 ▼

Press Action: Press ▼ Message Type: CC Toggle ▼

Number: 64 - +

On Value: 127 - +

Off Value: 0 - +

Hold BPM Dial for 3s to Clear Preset

Revision #4

Created Mon, Jun 10, 2024 3:10 PM by Junior Thomason

Updated Mon, Jun 10, 2024 4:51 PM by Junior Thomason