

CC Toggle

Used to toggle between two separate CC values

Enter the Number, Values, and Channel for which to send your message.

When pressing the switch associated with this Midi type, the On Value will be sent first then the Off Value will be sent on the second press, this process will repeat each time the button is pressed. Switching banks will reset the counter and the On Value will be sent with the first button press.



The screenshot shows a dark-themed configuration window for a MIDI controller. At the top left is a pink circular button with a left-pointing arrow. The interface is organized into two columns. The left column contains 'Message #:' with a dropdown menu showing 'Message 1', 'Press Action:' with a dropdown menu showing 'Press', 'Number: 64' with a horizontal slider, 'On Value: 127' with a horizontal slider, and 'Off Value: 0' with a horizontal slider. The right column contains 'Midi Channel:' with a dropdown menu showing 'Channel 1', 'Message Type:' with a dropdown menu showing 'CC Toggle', and a footer text 'Hold BPM Dial for 3s to Clear Preset'.

| Parameter | Value / Action |
|--------------|----------------|
| Message # | Message 1 |
| Midi Channel | Channel 1 |
| Press Action | Press |
| Message Type | CC Toggle |
| Number | 64 |
| On Value | 127 |
| Off Value | 0 |

Hold BPM Dial for 3s to Clear Preset

Revision #4

Created 10 June 2024 15:10:34 by Junior Thomason

Updated 10 June 2024 16:51:44 by Junior Thomason