

# CC

Generally used to control individual functions or device parameters within your external Midi device

Enter the Number, Value, and Channel for which to send your message



The image shows a dark-themed user interface for configuring a MIDI Control Change (CC) message. It features several dropdown menus and sliders. A pink arrow icon is in the top left corner. The settings are as follows:

Parameter	Value
Message #:	Message 1
Midi Channel:	Channel 1
Press Action:	Press
Message Type:	CC
Number:	64
Value:	127
Value 2:	0

At the bottom, there is a text instruction: "Hold BPM Dial for 3s to Clear Preset".

Revision #2

Created 10 June 2024 15:05:48 by Junior Thomason

Updated 10 June 2024 16:51:44 by Junior Thomason