

CC

Generally used to control individual functions or device parameters within your external Midi device

Enter the Number, Value, and Channel for which to send your message

A screenshot of a MIDI CC control interface. The interface is dark-themed with white and yellow text. It features several dropdown menus and three horizontal sliders. A yellow circle highlights a back arrow icon in the top left. The 'Message #' dropdown is set to 'Message 1'. The 'Midi Channel:' dropdown is set to 'Channel 1'. The 'Press Action:' dropdown is set to 'Press'. The 'Message Type:' dropdown is set to 'CC'. The 'Number:' is set to 64, with a slider bar. The 'Value:' is set to 127, with a slider bar. The 'Value 2:' is set to 0, with a slider bar. At the bottom, there is a text instruction: 'Hold BPM Dial for 3s to Clear Preset'.

← Message #: Message 1 ▼ Midi Channel: Channel 1 ▼

Press Action: Press ▼ Message Type: CC ▼

Number: 64 - [Slider] +

Value: 127 - [Slider] +

Value 2: 0 - [Slider] +

Hold BPM Dial for 3s to Clear Preset

Revision #2

Created Mon, Jun 10, 2024 3:05 PM by Junior Thomason

Updated Mon, Jun 10, 2024 4:51 PM by Junior Thomason