

CC

Generally used to control individual functions or device parameters within your external Midi device

Enter the Number, Value, and Channel for which to send your message

A screenshot of a MIDI CC control interface. The interface is dark-themed with white and blue text. At the top left is a blue circular button with a white left-pointing arrow. Below it are two dropdown menus: 'Message #' with 'Message 1' selected, and 'Midi Channel:' with 'Channel 1' selected. Below these are two more dropdown menus: 'Press Action:' with 'Press' selected, and 'Message Type:' with 'CC' selected. Below the dropdowns are three horizontal sliders. The first slider is labeled 'Number: 64' with a blue minus sign on the left and a blue plus sign on the right. The second slider is labeled 'Value: 127' with a blue minus sign on the left and a blue plus sign on the right. The third slider is labeled 'Value 2: 0' with a blue minus sign on the left and a blue plus sign on the right. At the bottom, there is a text instruction: 'Hold BPM Dial for 3s to Clear Preset'.

Revision #2

Created Mon, Jun 10, 2024 3:05 PM by Junior Thomason

Updated Mon, Jun 10, 2024 4:51 PM by Junior Thomason