


# CC

Generally used to control individual functions or device parameters within your external Midi device

Enter the Number, Value, and Channel for which to send your message



The image shows a digital interface for configuring a MIDI Continuous Controller (CC) message. It features a dark blue background with white and pink text and controls. At the top left is a pink circular button with a left-pointing arrow. Below it are two dropdown menus: 'Message #' set to 'Message 1' and 'Midi Channel:' set to 'Channel 1'. Further down are 'Press Action:' set to 'Press' and 'Message Type:' set to 'CC'. The bottom section contains three horizontal sliders with pink knobs. The first slider is labeled 'Number: 64' with minus and plus icons. The second is labeled 'Value: 127' with minus and plus icons. The third is labeled 'Value 2: 0' with minus and plus icons. At the very bottom, a text instruction reads 'Hold BPM Dial for 3s to Clear Preset'.

← Message #: Message 1 ▼ Midi Channel: Channel 1 ▼

Press Action: Press ▼ Message Type: CC ▼

Number: 64 - +

Value: 127 - +

Value 2: 0 - +

Hold BPM Dial for 3s to Clear Preset

Revision #2

Created Mon, Jun 10, 2024 3:05 PM by Junior Thomason

Updated Mon, Jun 10, 2024 4:51 PM by Junior Thomason