

CC

Generally used to control individual functions or device parameters within your external Midi device

Enter the Number, Value, and Channel for which to send your message



The image shows a digital interface for configuring a MIDI Continuous Controller (CC) message. It features a dark blue background with white and pink text and controls. A pink circular icon with a left-pointing arrow is in the top left corner. The interface includes two columns of dropdown menus: 'Message #' (set to 'Message 1') and 'Midi Channel:' (set to 'Channel 1') in the top row; 'Press Action:' (set to 'Press') and 'Message Type:' (set to 'CC') in the second row. Below these are three horizontal sliders. The first slider is labeled 'Number: 64' with a pink knob and '+' and '-' buttons. The second slider is labeled 'Value: 127' with a pink knob and '+' and '-' buttons. The third slider is labeled 'Value 2: 0' with a pink knob and '+' and '-' buttons. At the bottom, a text instruction reads 'Hold BPM Dial for 3s to Clear Preset'.

← Message #: Message 1 ▼ Midi Channel: Channel 1 ▼

Press Action: Press ▼ Message Type: CC ▼

Number: 64 - +

Value: 127 - +

Value 2: 0 - +

Hold BPM Dial for 3s to Clear Preset

Revision #2

Created Mon, Jun 10, 2024 3:05 PM by Junior Thomason

Updated Mon, Jun 10, 2024 4:51 PM by Junior Thomason