

CC

Generally used to control individual functions or device parameters within your external Midi device

Enter the Number, Value, and Channel for which to send your message

A screenshot of a MIDI CC configuration interface. The interface has a dark blue background with white and pink text. At the top left is a pink circular arrow icon. The layout includes several dropdown menus and sliders. The 'Message #' dropdown is set to 'Message 1'. The 'Midi Channel:' dropdown is set to 'Channel 1'. The 'Press Action:' dropdown is set to 'Press'. The 'Message Type:' dropdown is set to 'CC'. Below these are three sliders: 'Number: 64' with a pink knob, 'Value: 127' with a pink knob, and 'Value 2: 0' with a pink knob. At the bottom, there is a text instruction: 'Hold BPM Dial for 3s to Clear Preset'.

← Message #: Message 1 ▼

Midi Channel: Channel 1 ▼

Press Action: Press ▼

Message Type: CC ▼

Number: 64 -

Value: 127 -

Value 2: 0 -

Hold BPM Dial for 3s to Clear Preset

Revision #2

Created 10 June 2024 15:05:48 by Junior Thomason

Updated 10 June 2024 16:51:44 by Junior Thomason