

Chromatic Tuner

Long press the Tap Switch to activate the Tuner, activating the Tuner will automatically mute your audio signal. Press the Tap Switch to deactivate the Tuner and restore your audio signal.



Revision #2

Created 5 May 2025 16:20:16 by Junior Thomason

Updated 5 May 2025 16:23:58 by Junior Thomason