

Chromatic Tuner

Long press the Tap Switch to activate the Tuner, activating the Tuner will automatically mute your audio signal. Press the Tap Switch to deactivate the Tuner and restore your audio signal.

Revision #2

Created Mon, May 5, 2025 4:20 PM by Junior Thomason

Updated Mon, May 5, 2025 4:23 PM by Junior Thomason