

Empty Message

When selected no MIDI information will be sent within this message slot.

← Message #: Message 1 ▼ Midi Channel: Channel 1 ▼

Press Action: Empty ▼ Message Type: Empty ▼

Number: 0 - [Slider] +

Value 1: 0 - [Slider] +

Value 2: 0 - [Slider] +

Hold BPM Dial for 3s to Clear Preset

Revision #2

Created Mon, Jun 10, 2024 2:49 PM by Junior Thomason

Updated Mon, Jun 10, 2024 4:51 PM by Junior Thomason