

# Empty Message

When selected no MIDI information will be sent within this message slot.



Message #:

Message 1

Midi Channel:

Channel 1

Press Action:

Empty

Message Type:

Empty

Number:

0

-



+

Value 1:

0

-



+

Value 2:

0

-



+

Hold BPM Dial for 3s to Clear Preset