

# Global BPM

\*\*\* This Feature is Included in Firmware Version v2.1.0 and Above. \*\*\*

Global BPM is a useful feature if you want to jump back and forth between Banks and keep the BPM from changing when each Bank loads. This comes in handy when you use Banks for song presets (with a stored BPM) and then use the individual Presets to jump into different Banks to make MIDI changes to other pedals, loops, JHS Red Remote, etc.

Each Bank can be assigned to use the Global BPM feature within the Programming Menu Screen. Simply click the Global BPM checkbox which will insure this Bank will not update the BPM once it loads.



---

Revision #2

Created Fri, Feb 14, 2025 8:54 PM by Junior Thomason

Updated Fri, Feb 14, 2025 9:02 PM by Junior Thomason