

Note Off

Used to send MIDI note off information.

Select Number/MIDI Note and Channel.



The image shows a digital interface for configuring a MIDI Note Off message. It features a dark blue background with white and pink text and controls. At the top left is a pink circular button with a white left-pointing arrow. Below it are two columns of controls. The first column has 'Message #:' with a dropdown menu showing 'Message 1', 'Press Action:' with a dropdown menu showing 'Press', 'Number: 39' with a slider bar, and 'Velocity: 0' with a slider bar. The second column has 'Midi Channel:' with a dropdown menu showing 'Channel 1', 'Message Type:' with a dropdown menu showing 'Note Off', 'D#2' with a slider bar, and 'Value 2: 0' with a slider bar. At the bottom, there is a text instruction: 'Hold BPM Dial for 3s to Clear Preset'.

← Message #: Message 1 ▼ Midi Channel: Channel 1 ▼

Press Action: Press ▼ Message Type: Note Off ▼

Number: 39 - D#2 +

Velocity: 0 - +

Value 2: 0 - +

Hold BPM Dial for 3s to Clear Preset

Revision #2

Created Mon, Jun 10, 2024 4:42 PM by Junior Thomason

Updated Wed, Jun 12, 2024 6:39 PM by Junior Thomason