

# Note Off

Used to send MIDI note off information.

Select Number/MIDI Note and Channel.



The image shows a digital interface for configuring a MIDI 'Note Off' message. It features a dark blue background with white and yellow text and controls. At the top left is a yellow circular button with a left-pointing arrow. The interface is organized into two columns. The left column contains 'Message #:' with a dropdown menu showing 'Message 1', 'Press Action:' with a dropdown menu showing 'Press', 'Number: 39' with a minus sign and a slider, 'Velocity: 0' with a minus sign and a slider, and 'Value 2: 0' with a minus sign and a slider. The right column contains 'Midi Channel:' with a dropdown menu showing 'Channel 1', 'Message Type:' with a dropdown menu showing 'Note Off', and 'D#2' in yellow text above the 'Number' slider. At the bottom, a white text instruction reads 'Hold BPM Dial for 3s to Clear Preset'.

← Message #: Message 1 ▼ Midi Channel: Channel 1 ▼

Press Action: Press ▼ Message Type: Note Off ▼

Number: 39 - D#2

Velocity: 0 -

Value 2: 0 -

Hold BPM Dial for 3s to Clear Preset

Revision #2

Created 10 June 2024 16:42:23 by Junior Thomason

Updated 12 June 2024 18:39:34 by Junior Thomason