

Note On

Used to send MIDI note on information.

Select Number/MIDI Note, Velocity, and Channel.



The image shows a dark-themed user interface for configuring a MIDI message. At the top left is a back arrow icon. The interface is divided into two columns. The left column contains 'Message #:' (set to 'Message 1'), 'Press Action:' (set to 'Press'), 'Number: 39', and 'Velocity: 127'. The right column contains 'Midi Channel:' (set to 'Channel 1'), 'Message Type:' (set to 'Note On'), and 'D#2' above a slider. Below these are three horizontal sliders: the first for 'Number' (value 39), the second for 'Velocity' (value 127), and the third for 'Value 2' (value 0). At the bottom, a text instruction reads 'Hold BPM Dial for 3s to Clear Preset'.

Parameter	Value
Message #	Message 1
Midi Channel	Channel 1
Press Action	Press
Message Type	Note On
Number	39
Velocity	127
Value 2	0

Hold BPM Dial for 3s to Clear Preset

Revision #3

Created 10 June 2024 16:35:46 by Junior Thomason

Updated 12 June 2024 18:39:34 by Junior Thomason