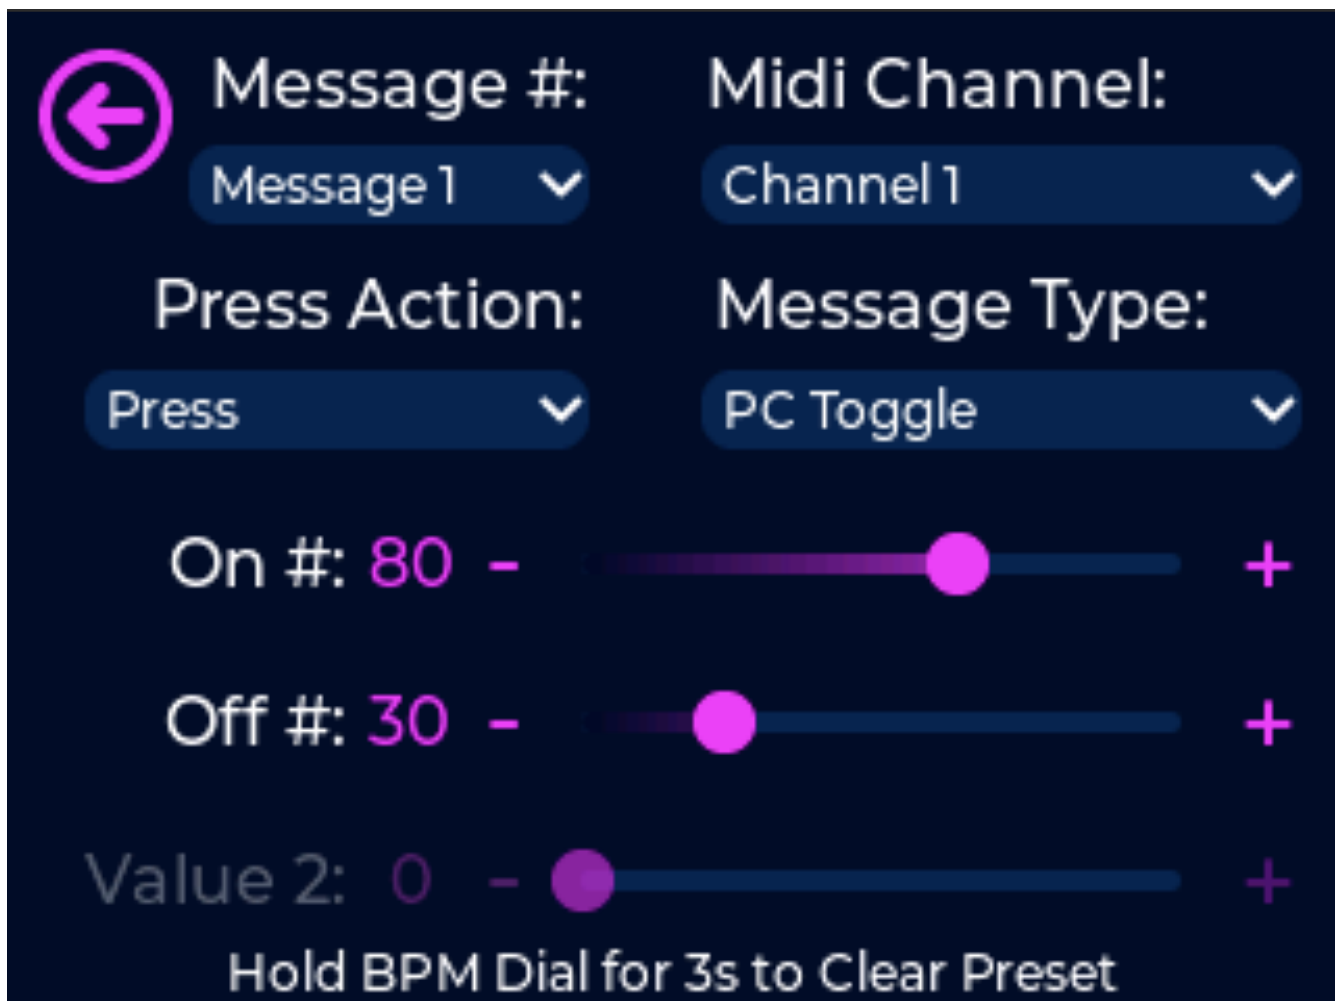


PC Toggle

Used to toggle between two separate PC numbers

Enter the On #, Off # and Channel for which to send your message.

When pressing the switch associated with this Midi type, the On # will be sent first then the Off # will be sent on the second press, this process will repeat each time the button is pressed. Switching banks will reset the counter and the On # will be sent with the first button press.

The image shows a digital interface for configuring a 'PC Toggle' function. It features a dark blue background with white and pink text and controls. At the top left is a pink circular button with a left-pointing arrow. The interface is organized into two columns. The left column contains 'Message #:' with a dropdown menu showing 'Message 1', 'Press Action:' with a dropdown menu showing 'Press', 'On #:' with the value '80', 'Off #:' with the value '30', and 'Value 2:' with the value '0'. The right column contains 'Midi Channel:' with a dropdown menu showing 'Channel 1', 'Message Type:' with a dropdown menu showing 'PC Toggle', and three horizontal sliders corresponding to the 'On #', 'Off #', and 'Value 2' settings. Each slider has a pink knob and is flanked by minus and plus signs. At the bottom, a text instruction reads 'Hold BPM Dial for 3s to Clear Preset'.

Revision #2

Created Mon, Jun 10, 2024 3:23 PM by Junior Thomason

Updated Mon, Jun 10, 2024 4:51 PM by Junior Thomason