

# PC Toggle

Used to toggle between two separate PC numbers

Enter the On #, Off # and Channel for which to send your message.

When pressing the switch associated with this Midi type, the On # will be sent first then the Off # will be sent on the second press, this process will repeat each time the button is pressed. Switching banks will reset the counter and the On # will be sent with the first button press.

← Message #: Message 1 ▼ Midi Channel: Channel 1 ▼

Press Action: Press ▼ Message Type: PC Toggle ▼

On #: 80 - [Slider] +

Off #: 30 - [Slider] +

Value 2: 0 - [Slider] +

Hold BPM Dial for 3s to Clear Preset

Revision #2

Created Mon, Jun 10, 2024 3:23 PM by Junior Thomason

Updated Mon, Jun 10, 2024 4:51 PM by Junior Thomason