

# PC Toggle

Used to toggle between two separate PC numbers

Enter the On #, Off # and Channel for which to send your message.

When pressing the switch associated with this Midi type, the On # will be sent first then the Off # will be sent on the second press, this process will repeat each time the button is pressed. Switching banks will reset the counter and the On # will be sent with the first button press.



The image shows a dark-themed MIDI configuration interface. At the top left is a pink circular icon with a left-pointing arrow. The interface is organized into two columns. The left column contains: 'Message #' with a dropdown menu showing 'Message 1'; 'Press Action:' with a dropdown menu showing 'Press'; 'On #: 80' with a horizontal slider; 'Off #: 30' with a horizontal slider; and 'Value 2: 0' with a horizontal slider. The right column contains: 'Midi Channel:' with a dropdown menu showing 'Channel 1'; 'Message Type:' with a dropdown menu showing 'PC Toggle'. At the bottom, there is a text instruction: 'Hold BPM Dial for 3s to Clear Preset'.

Revision #2

Created 10 June 2024 15:23:44 by Junior Thomason

Updated 10 June 2024 16:51:44 by Junior Thomason